


CITY

E-PM9 Series (E-PM90 - E-PM999)

INSTALLATION AND USE

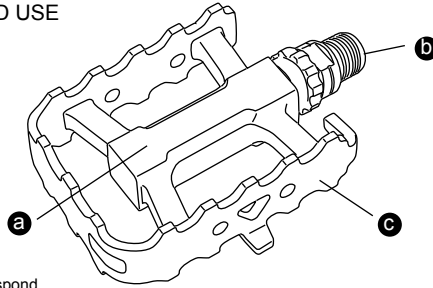

Illustrations may not correspond exactly to your model of pedal

PARTS & TOOLS

PARTS: a. Pedal body b. Axle c. Pedal cage TOOLS: 6 mm or 8 mm Allen key, (depending on pedal model)

A) ATTACH PEDALS TO CRANKS

Pedals have 9/16" x 20T threaded axles. The right pedal (marked R) is assembled in a clockwise direction. The left pedal (marked L) is assembled in a counter-clockwise direction.

1. Lubricate axle threads prior to assembly.
2. Use a thin 15 mm wrench or 6 mm / 8 mm Allen key for assembly.
3. Tighten well, but avoid excessive force. Recommended torque is 34 Nm (340 kgf/cm).